




All-Axle Important Install Notes

Please make sure to read and follow these installation instructions - **damage to the wire harness or motor due to improper installation is not covered under warranty.** Please contact us at info@ebikes.ca if you have any questions.

1. Make sure that inner diameter of your disc rotor is large enough that it doesn't rub any part of the motor or wire harness - it should be at least 35mm. Many disc rotors do not have the required inner diameter clearance and using them will result in damage to the wire harness.

2. Ensure the torque arm is mounted properly against the fork as pictured.

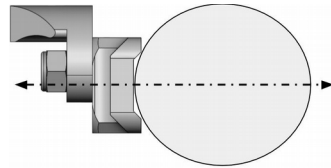

3. Ensure the torque arm is installed so that the cable exits below the axle when mounted in the frame.

Before and after your first ride, ensure all fasteners are tightened properly and no components are loose. You should check them regularly as part of your regular bike maintenance.

See the install video here:




All-Axle Important Install Notes

Please make sure to read and follow these installation instructions - **damage to the wire harness or motor due to improper installation is not covered under warranty.** Please contact us at info@ebikes.ca if you have any questions.

1. Make sure that inner diameter of your disc rotor is large enough that it doesn't rub any part of the motor or wire harness - it should be at least 35mm. Many disc rotors do not have the required inner diameter clearance and using them will result in damage to the wire harness.

2. Ensure the torque arm is mounted properly against the fork as pictured.

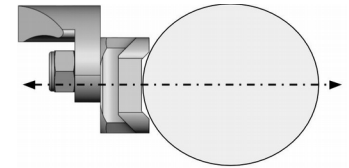

3. Ensure the torque arm is installed so that the cable exits below the axle when mounted in the frame.

Before and after your first ride, ensure all fasteners are tightened properly and no components are loose. You should check them regularly as part of your regular bike maintenance.

See the install video here:

